

# Read Pad/Pit-lid-module

## INSTALLATION INSTRUCTIONS

---

### Installing read pad on pit lid module

Note: Pit lid modules may vary in style



#### Step 1

Insert read pad through locking nut.



#### Step 2

Insert read pad through the hole on the pit lid




#### Step 3

Insert read pad into pit lid module.



#### Step 4

Insert pit lid module back through pit lid.

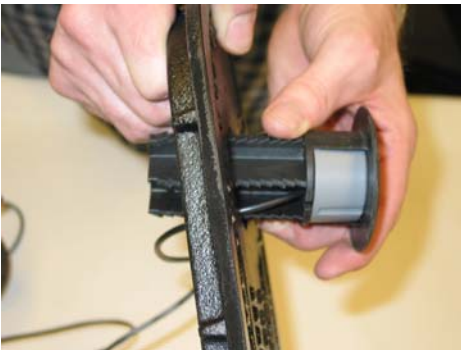

#### Step 5

Tighten plastic nut to secure the pit lid module on to pit lid.



#### Step 6

Tighten plastic nut to secure the pit lid module on to pit lid. Do not over tighten

